## NOTE:

SIP TAPE SHALL BE INSTALLED EITHER INTERIOR OR EXTERIOR BASED ON CODE REQUIREMENTS AND LOCAL CLIMATE CONDITIONS. CONSULT WITH A BUILDING SCIENCE PROFESSIONAL TO DETERMINE THE LOCATION OF SIP TAPE APPLICATION ON YOUR STRUCTURE. REFER TO EPT-105A FOR INTERIOR APPLICATION.


## TAPE APPLICATION SEQUENCE:

## 1. INSTALL SIPS

IF RAIN IS OCCURRING AT TIME OF SIP ROOF INSTALLATION RUN A BEAD OF SEALANT AT EXTERIOR SIP JOINT TO PREVENT MOISTURE PENETRATION INTO SPLINE JOINT. IF YOU BELIEVE RAIN WILL BE LIKELY DURING INSTALLATION CONTACT YOUR SIP REPRESENTATIVE TO PURCHASE ADDITIONAL SEALANT.

## 2. APPLY SIP TAPE TO WALLS AND ROOF SIPS

INSTALL TAPE FROM THE TOP TO THE BOTTOM OF THE SIP JOINTS BEGINNING WITH THE WALL CONNECTIONS, FOLLOWED BY WALL TO ROOF CONNECTIONS, AND THE ROOF JOINT SIP TAPE TO BE APPLIED LAST.

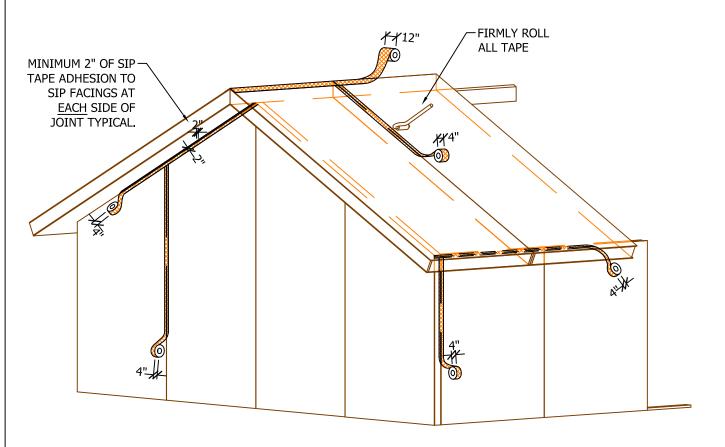

N.T.S. Rev: 12/10/2021

EPT-105B

SIP TAPE APPLICATION EXTERIOR

