


1. RECOMMENDED BRACING SHOULD BE PLACED EVERY 12'-0".
2. RECOMMENDED BRACE THICKNESS:
  - \* 8'-0" TO 10'-0" PANEL - 2x4
  - \* 12'-0" TO 16'-0" PANEL - 2x6
3. KEEP THE TOP 2x4x12" BLOCK WITHIN 2'-0" FROM THE TOP OF THE PANEL.
- 4.) RECOMMENDED BRACE LENGTH SHOULD BE  $\frac{2}{3}$  THE HEIGHT OF THE PANEL.
- 5.) THE BRACING INSIDE AND OUTSIDE SHOULD BE LEFT ASSEMBLED UNTIL THE ROOF IS IN PLACE AND PROPERLY FASTENED.

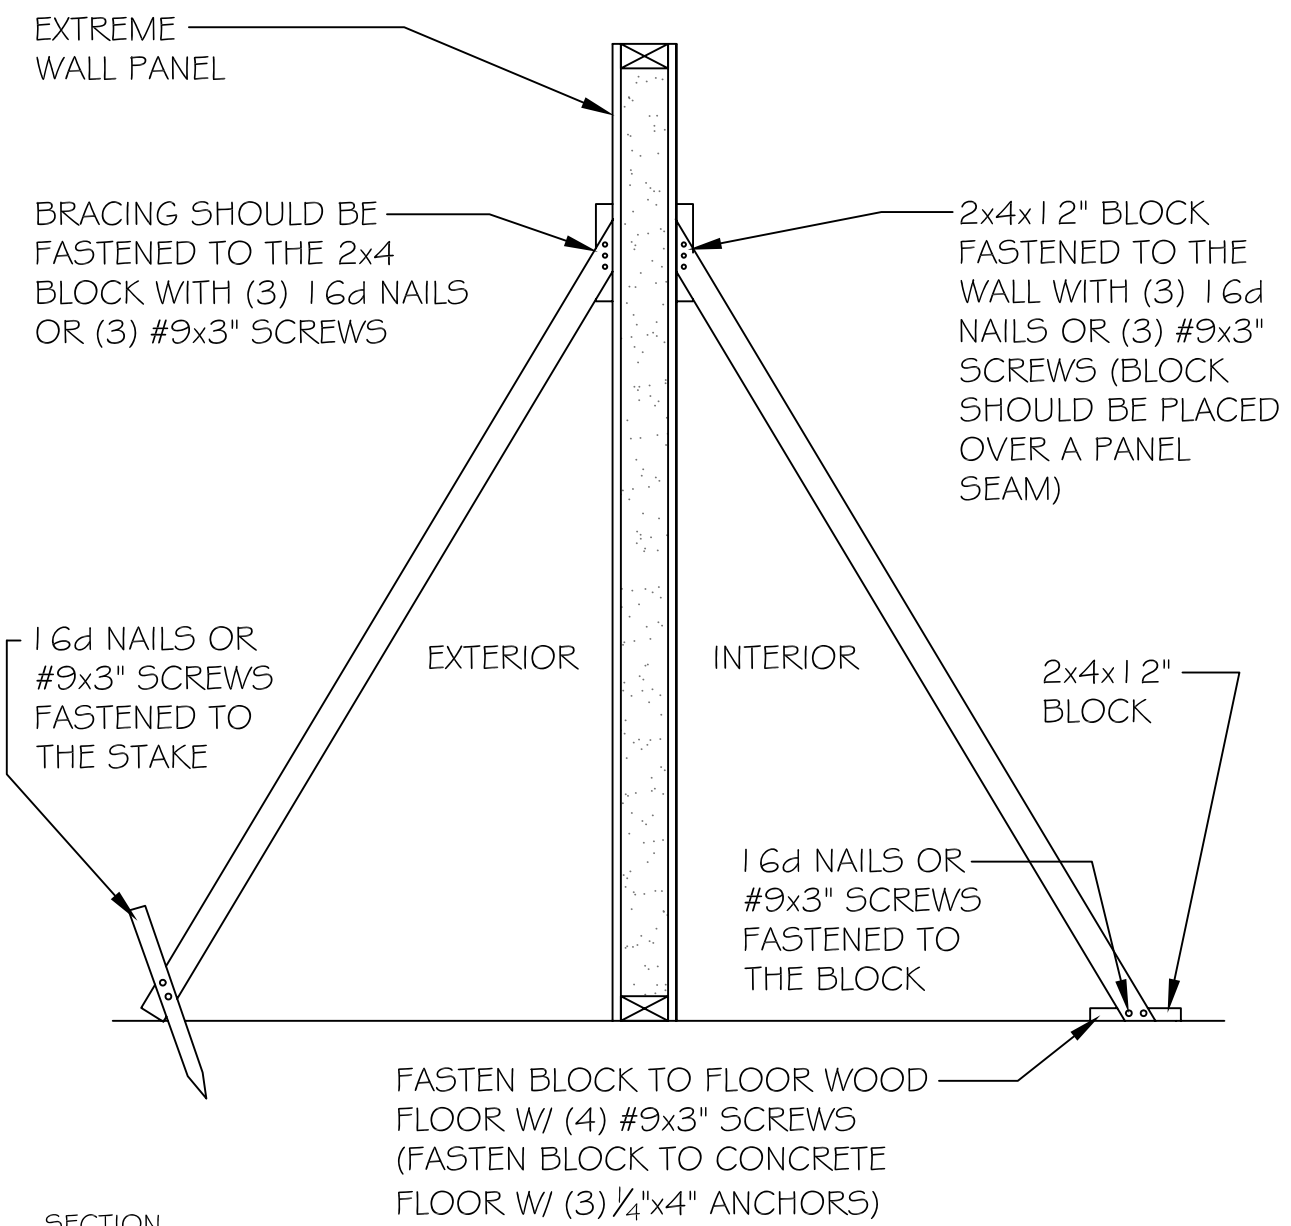

SECTION  
NOT TO SCALE

DETAIL TITLE : WIND BRACING TIPS  
 DETAIL NO. : EP-122  
 PAGE NO. : 1 - 22  
 UPDATED : 2/5/2009

**Extreme Panel**  
 Technologies, Inc.  
 QUALITY EFFICIENT BUILDING SYSTEMS