


NOTES:


1. ALL NAILING PER EPT-100S
2. USE (2) 3/8" BEADS OF SEALANT PER EPT-103.
3. FOAM EDGE OF SIPS WILL BE RECESSED AT FACTORY TO RECEIVE LUMBER PER SIP SHOP DRAWINGS.

STEP #1:
INSTALL OPENING TOP AND BOTTOM 2X MEMBERS FLUSH TO FOAM.

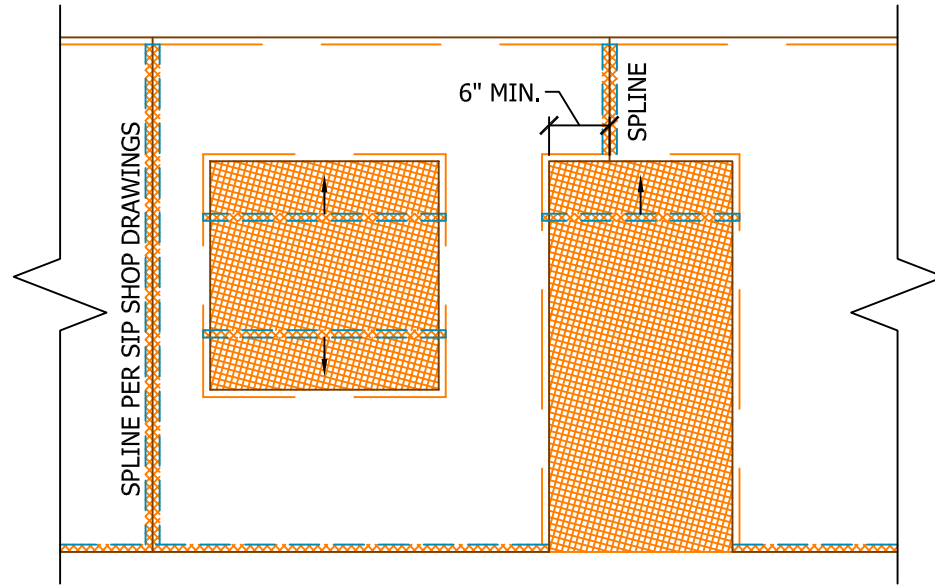

STEP #2:

1. PRE-DRILL ELECTRICAL CHASES PER EPT-106
2. INSTALL OPENING VERTICAL 2X MEMBERS FLUSH TO LUMBER PLATES AT TOP AND BOTTOM OF OPENING.
3. INSTALL CONTINUOUS TOP PLATE ACROSS SIP JOINTS.

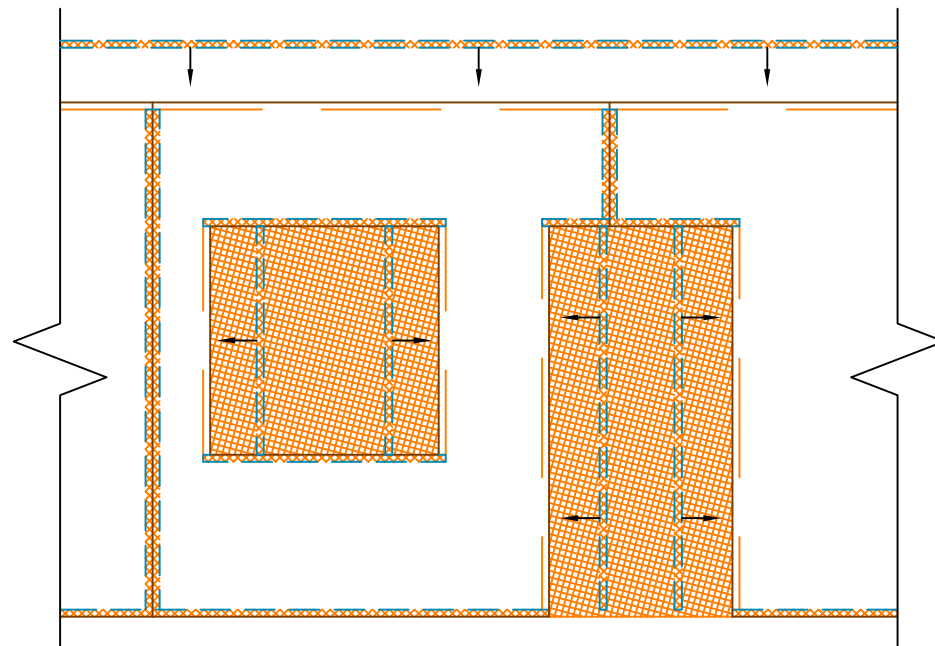

N.T.S.

Rev: 8/11/2022

EPT-412

FACTORY CUT OPENINGS